

PROSERIES 150.

FEATURES

- External Bleed Screw with Removable Metering Pin allows for easy cleaning of the metering pin without disassembling the valve (excluding the jar top model).
- 2.External bleed screw for manual operation.
- 3.Internal bleed handle for manual operation.
- 4.Removable inlet cap for easy conversion from globe to anglestyle valve (1 ½" & 2" models only).
- 5. Captured pluger Allows for the solenoid to be removed without losing internals parts.

SPECIFICATIONS

- 1. Pressure 20 PSI minimum to 150 PSI
- 2 Voltage 24 VAC 60 cycle, .4 amps inrush, .2 amps holding

BEFORE INSTALLATION

- 1. Flush system thoroughly before installing valves.
- 2. Make sure you have sufficient water supply, pressure & flow.

INSTALLING VALVE WITH ADAPTERS

- Wrap adapters with 2 to 3 complete wraps of Teflon® tape around threads.
- 2. Hand tighten adapters into valve.
- 3. Carefully tighten adapters one additional turn past hand tight.
- 4. Do not use flow control handle and solenoid as a lever.


CAUTION: DO NOT OVER-TIGHTEN ADAPTERS!

OPERATING VALVE MANUALLY

- Open external bleed screw counter clockwise water will exit screw hole and valve will open.
- 2. Open internal bleed handle valve will open.

Part Number: 31005103 Rev: 11


PARTS BREAKDOWN

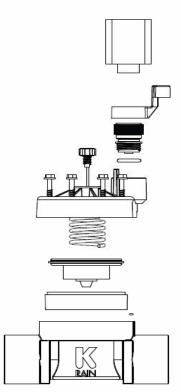

7101 1" Female Thread, NPT

7101 - SL 1" Female Slip

7101 - BSP 1" Female Thread, BSP

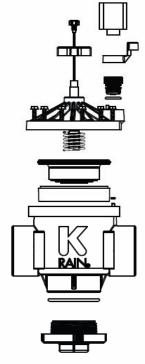


7115 1.5" Female Thread, NPT

7115 - BSP 1.5" Female Thread,BSP

7102 - **BSP** 2" Female Thread, BSP

7102 2" Female Thread, NPT

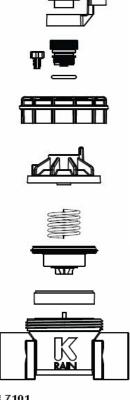

7101 1" Female Thread, NPT Jar-Tor - **J**

7101 - J - SL 1" Female Slip Jar-Top

7101 - **J** - **BSP** 1" Female Thread, BSP Jar-Top



K-RAIN MANUFACTURING CORP.

1640 Australian Avenue Riviera Beach, FL 33404 USA PH: 1-561-844-1002 / 1-800-735-7246 FAX: 1-561-842-9493 WEB: http://www.krain.com

© K-RAIN Manufacturing Corp.